



HOW TO ASSEMBLE YOUR BUDGET HIGHLINE BANNERSTAND

- Take your system out of the carry bag and place the cassette on the floor.
- Turn the feet into the open position. Extend the pole and insert onto the hole on the rear of the cassette.
- Stand at the rear of the system. With the pole in one hand lean the system backwards and with your other hand gently pull the graphic out of the cassette.
- When fully extended, secure the graphic bar to the pole by clipping the pole connector into the groove on the reverse of the graphic bar.
- Now gently lean the system forwards to a vertical standing positions.



Absolute Group
32 Jack Lane
Leeds
LS11 9NP

t: 0113 234 4300 • f: 0113 242 6964
e: sales@adps.biz • w: www.adps.biz



TAKING DOWN YOUR BUDGET HIGHLINE BANNERSTAND

- From the rear of the graphic take the pole and gently lean the system backwards until you can comfortably reach where the graphic bar and pole meet.
- Hold the pole firmly with one hand and with the other hand slowly pull the graphic bar up until it detaches from the pole connector.
- Slowly return the graphic into the cassette, while still holding on to the pole.

DO NOT LET GO OF THE GRAPHIC BAR.

- When the graphic is fully retracted in to the cassette, remove the pole and return the system to the carry bag.



Absolute Group
32 Jack Lane
Leeds
LS11 9NP

t: 0113 234 4300 • f: 0113 242 6964
e: sales@adps.biz • w: www.adps.biz